

GEHL

Form No.
50950004
BP1212
English

V400 V400 (EU)

Skid-Steer Loaders



Operator's Manual




Manitou Americas, Inc., in cooperation with the Society of Automotive Engineers, has adopted this Safety Alert Symbol to pinpoint precautions which, if not properly followed, can create a safety hazard. When you see this symbol in this manual or on the machine itself, you are reminded to **BE ALERT!** Your personal safety is involved!



Operators must have instructions before running the machine. Untrained operators can cause injury or death.

WRONG

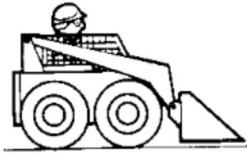

Never use loader without ROPS/FOPS. Never modify the ROPS/FOPS structure.



CORRECT



Read Operator's Manual before using machine.


WRONG



Never use the loader to lift personnel.



CORRECT

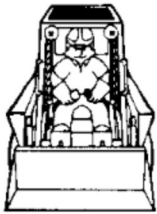

Do not use loader around explosive dust or gas, or where exhaust can contact flammable material.

WRONG



V400 Skid-Steer Loader

Operator's Manual

TABLE OF CONTENTS

Introduction	1
Safety	5
Controls and Safety Equipment	19
Operation	43
Service	57
Troubleshooting	91
Maintenance	99
Specifications	103
Torque Specifications	109
Warranty	110
INDEX	111

Loader Model Number	
Loader Serial Number	
Engine Serial Number	

Hydraloc and Hydraglide are trademarks of Manitou Americas, Inc.
Gehl, Powerview, All-Tach and Power-A-Tach are registered trademarks of Manitou Americas, Inc.



EC DECLARATION OF CONFORMITY

1. Manufacturer: **Manitou Americas, Inc.**
2. Address: **One Gehl Way
West Bend, WI 53095-0179 U.S.A.**

3. Technical Construction File Location:
**Manitou Interface and Logistics Europe SA/NV
Chaussée de Wavre SN
1360 PERWEZ
Belgium**
4. Authorized Representative:
5. Address:

6. **We hereby declare that the model(s) listed below conforms to EC Directives: 2004/108/EC (EMC), 97/23/EC (Pressure Equipment), 2006/42/EC (Machinery) and 2000/14/EC (Noise Emission), as amended by 2005/88/EC.**
7. In accordance with EN/ISO Standards:
EN ISO 3450:1996, ISO 6165
8. Category: **EARTH-MOVING MACHINERY/
LOADERS/COMPACT**
9. Model(s): **V400**
10. Directive/Conformity Assessment Procedure/Notified Body:

2004/108/EC	Type-test	Self-certification
97/23/EC	Self-certification	-----
2006/42/EC	Self-certification	-----
2000/14/EC	Annex VIII – Full Quality Assurance	TÜV Industrie Service GmbH – TÜV SÜD Group Westendst. 199, D-80686 München GERMANY

INTRODUCTION

This Operator's Manual provides the owner/operator with information for operating, maintaining and servicing model V400 skid-steer loaders. More important, this manual provides an operating plan for safe and proper use of the machine. Major points of safe operation are detailed in the *Safety* chapter of this manual.

Users should read and understand the contents of this manual completely and become familiar with the machine before operating it. Contact your authorized Gehl dealer if you have any questions concerning information in this manual, require extra manuals, and for information concerning the availability of manuals in other languages.

Throughout this manual information is provided set in *italic* type and introduced by the word **Note** or **Important**. Read carefully and comply with those messages – it will improve operating and maintenance efficiency, help avoid breakdowns and damage, and extend the machine's life.

A manual storage box in the operator's compartment behind the seat holds the Operator's Manual and AEM Safety Manual (also available in Spanish). Please return the manuals to this box and keep them with the unit at all times. If this machine is resold, these manuals should be given to the new owner.

The attachments and equipment available for use with this machine have a wide variety of applications. Read the manual provided with the attachment to learn how to safely maintain and operate the equipment. Be sure the machine is suitably equipped for the type of work to be performed.


Do not use this machine for any applications or purposes other than those described in this manual or those applicable for approved attachments. If the machine is to be used with special attachments or equipment other than those approved by Manitou Americas, consult your Gehl dealer. Any person using non-approved attachments or making unauthorized modifications is responsible for the consequences.

The Gehl dealership network stands ready to provide any assistance that may be required, including providing genuine Gehl service parts. All service parts should be obtained from your Gehl dealer. Provide complete information about the part and include the model and serial numbers of the machine. Record these numbers in the space provided on the Table of Contents page as a handy reference.

Please be aware that Manitou Americas strives to continuously improve its products and reserves the right to make changes and improvements in the design and construction of any part without incurring the obligation to install such changes on any previously delivered unit.

If this machine was purchased "used," or if the owner's address has changed, please provide your Gehl dealer or Gehl Service Department with the owner's name and current address, along with the machine model and serial number. This will allow the registered owner information to be updated, so that the owner can be notified directly in case of an important product issue, such as a safety update program.

Loader Identification

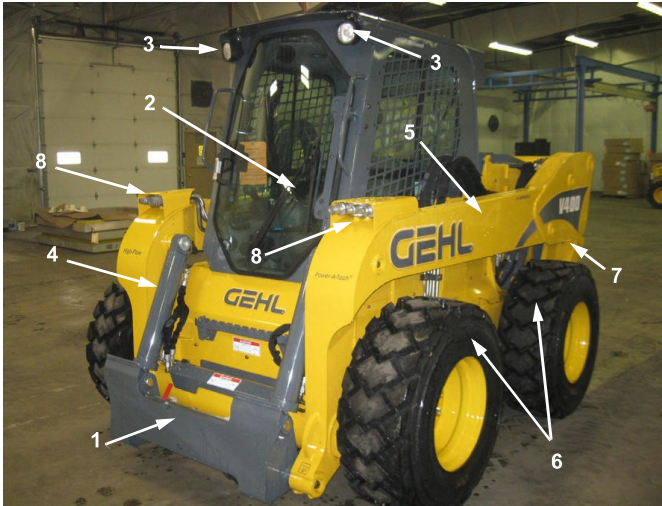













































- | | |
|-----------------------|----------------------------|
| 1. Attachment Bracket | 5. Lift Arm |
| 2. Restraint Bar | 6. Tires |
| 3. Front Work Lights | 7. Lift Arm Support Device |
| 4. Tilt Cylinders | 8. Auxiliary Couplers |



- | | |
|---|----------------------------------|
| 1. Roll-Over/Falling Object Protective System (ROPS/FOPS) | 4. Rear Work Lights |
| 2. Lift Cylinder | 5. Tail Lights (Position Lights) |
| 3. Engine Cover | 6. Rear Door |
| | 7. Fuel Cap Cover |

Control/Indicator Symbols

 Power Off	 Power On	 Engine Start	 Battery Charge	 Electrical Power
 Worklight w/Tail Lights	 Worklight	 Safety Alert	 Hazard Flasher	 Fasten Seatbelt
 Horn	 Read Operator's Manual	 Volume - Full	 Volume - Half Full	 Volume - Empty
H-L High - Low	N Neutral	F Forward	R Reverse	(P) Parking Brake
 Engine Air Filter	 Engine Oil	 Engine Oil Filter	 Engine Oil Pressure	 Fuel Filter
 Engine Temperature	 Hydraulic System	 Hydraulic Oil Temperature	 Hydraulic Oil Filter	 Grease Lubrication Point
 Glow Indicator Lamp	 Diesel Fuel	 Chaincase Oil	 Clockwise Rotation	 Counterclockwise Rotation
 Fast	 Slow	 Ride Control	 Engine Malfunction Shutdown	 Bucket - Float
 Bucket - Rollback	 Bucket - Dump	 Lift Arm - Lower	 Lift Arm - Raise	 Service Hours
 Lift Point	 Tie-Down	 Diesel Water Separator	 Power-A-Tach®	

THANK YOU FOR VISITE WITH

www.repair-manuals.com

DOWNLOAD THIS FULL MANUAL

Until download and place it on your computer We care with you ,We really try our best to complete your orders, so your review is very important to us to improve our services

WE OFFER

ORIGINAL FACTORY MANUALS , WORKSHOP
MANUALS , SERVICE MANUALS , REPAIR

OUR VISION : 100 % CUSTOMER SATISFACTION,
AFTER SALE SERVICE AND KEEP IN TOUCH WITH